



# Instruction Sheet: 303900 Wall Stereo

Store these instructions along with the enclosed maintenance checklist in a safe place. You may also access them on our website.



Take time to familiarize yourself with the use and maintenance of this equipment before using. Please file this Instruction Sheet in an accessible location. The Instruction Sheet must be read and familiar to anyone who is using Southpaw Enterprises Equipment.

**IMPORTANT: Please check equipment immediately for any damage that may have resulted during shipping.**

#### MATERIALS LIST:

Wall Stereo (completely assembled)  
Remote Control  
4 Anchors

#### TOOLS NEEDED:

Drill  
1/2" Drill Bit  
Philip Screw Driver

#### INSTALLATION PROCEDURE:

Position the Stereo on wall where it will be hung and mark mounting holes. Drill holes into wall, set anchors, position Stereo and secure to wall. Plug Stereo into 110v outlet.

#### INSTRUCTIONS FOR USE:

The Wall Stereo was intended for use with Southpaw Vibro Acoustic products (Rocker, Wedge, Ball Pool, Padded Corner, and Waterbed). Any two of these items can be connected to the Wall Stereo at one time. Connections are best used with the cords supplied with vibro product. Cord has one RCA jack at each end. Plug one end into the vibro product and the other into the rear of the Stereo rover. If standard speaker wire is used match the red terminals and the black terminals. Refer to the Stereo instruction manual for operation of Stereo. For best results, when using vibro products and the external speakers built into the rover use the FADE option on the Stereo and make the FADE REAR plus 11. Stereo can be used only with CD's or an MP3 player.

#### MAINTENANCE CHECKLIST

✓ All of the following wear points should be checked on a monthly basis and recorded on the checklist enclosed:

- Check for frayed wires
- Check the wood surface and edges for splinters. If found, discontinue use until repaired. You may repair it by sanding the area smooth with a medium grit sandpaper, and applying two coats of clear lacquer to the repaired area.

#### STORAGE PROCEDURES

- Store where not accessible by clients without proper supervision.


#### CLEANING INSTRUCTIONS

- Check with your infectious disease department before using these procedures.
- Check for client allergies first.
- Clean with a damp rag and a mild surface cleaning solution
- Let air dry or wipe dry with a cloth.


#### Step by Step




Drill a 1/2" hole. Hold metal channel flat alongside plastic straps and slide channel through hole. Minimum clearance behind wall is 1-7/8".

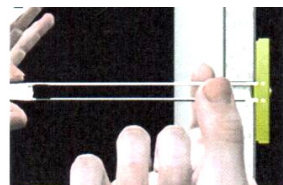

Hold ends of straps between thumb and forefinger and pull toward you until channel rests flush behind wall. Slide plastic cap along straps with other hand until flange of cap is flush with wall.

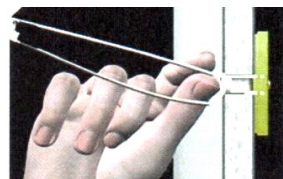

Snap straps at wall by pushing side to side snapping off straps level with flange of cap.

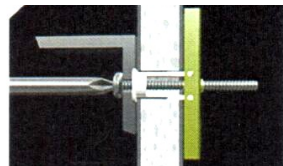

Place item over flange. Insert bolt through item and tighten until flush, then stop.

**Safety Precautions** - The safety of your clients is dependent on the appropriate choice of activity to match, yet challenge their physical abilities. Use appropriate spotting / safety techniques. In addition, the layout of your activity area, proper installation and maintenance of your equipment is critical. Southpaw equipment is not intended for recreational or outdoor use. Under no condition should this equipment be used without proper supervision.

**This sheet is for example only.** It is not meant to, in any way, replace local, county, state, or Federal standards. Be aware - it is your responsibility to find all pertinent safety information that pertains to your facility.

If you have any questions or comments, please call or write  
Southpaw Enterprises, Inc.  
P.O. Box 1047, Dayton, Ohio 45401 -1047  
Toll Free - (800) 228-1698  
Visit us at southpaw.com  
© 2024 Southpaw Enterprises, Inc.